


# Bug Blocker® Industrial Screen Door

3 Spring loaded hinges are provided for installation in the field. A piano hinge is also available.

### TYPES OF MESH

30 x 30 mesh of .011 dia.  
304 stainless steel

12 x 12 mesh of .023 dia.  
304 stainless steel

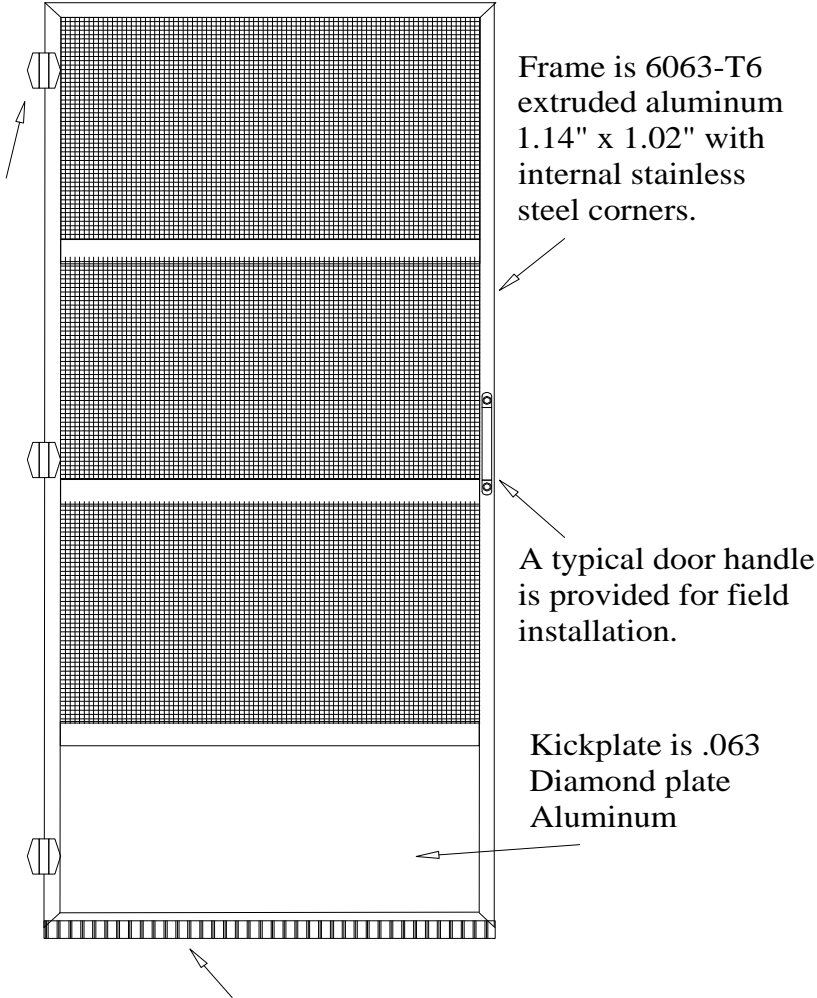

Frame is 6063-T6 extruded aluminum 1.14" x 1.02" with internal stainless steel corners.

A typical door handle is provided for field installation.

Kickplate is .063 Diamond plate Aluminum

$\frac{1}{2}$ " Brush seal is provided for the bottom and foam seal is provided for the rest of the perimeter of the frame.


## Bug Blocker® Industrial Screen Door Installation Instructions

1.) Attach all 3 hinges to the side of the frame that you want it to hinge from. Make sure that you stay 4" from corner of frame and that the hinges are pivoting on the same line.

2.) Hold door in door frame making sure the sides are equidistant and that the bottom has clearance for swinging.

3.) Screw hinges to door frame.

6.) Using the winding bars adjust hinges to desired closure strength. (They do not all need to be adjusted the same.)

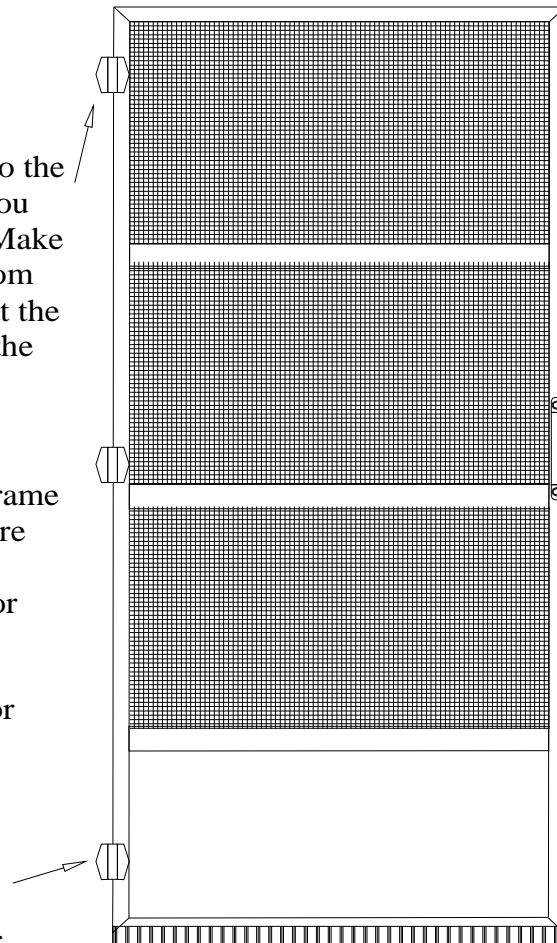

4.) Screw down door handle.

5.) Attach bottom brush seal to door and perimeter foam seal to door frame.